


WEATHERDEK POST WRAP

Step 1

Adhere Weatherdek Membrane up to Post and make cuts at a 45° angle up from base of post, and then straight up to the edge of the membrane to allow the material to lay flat around the post.

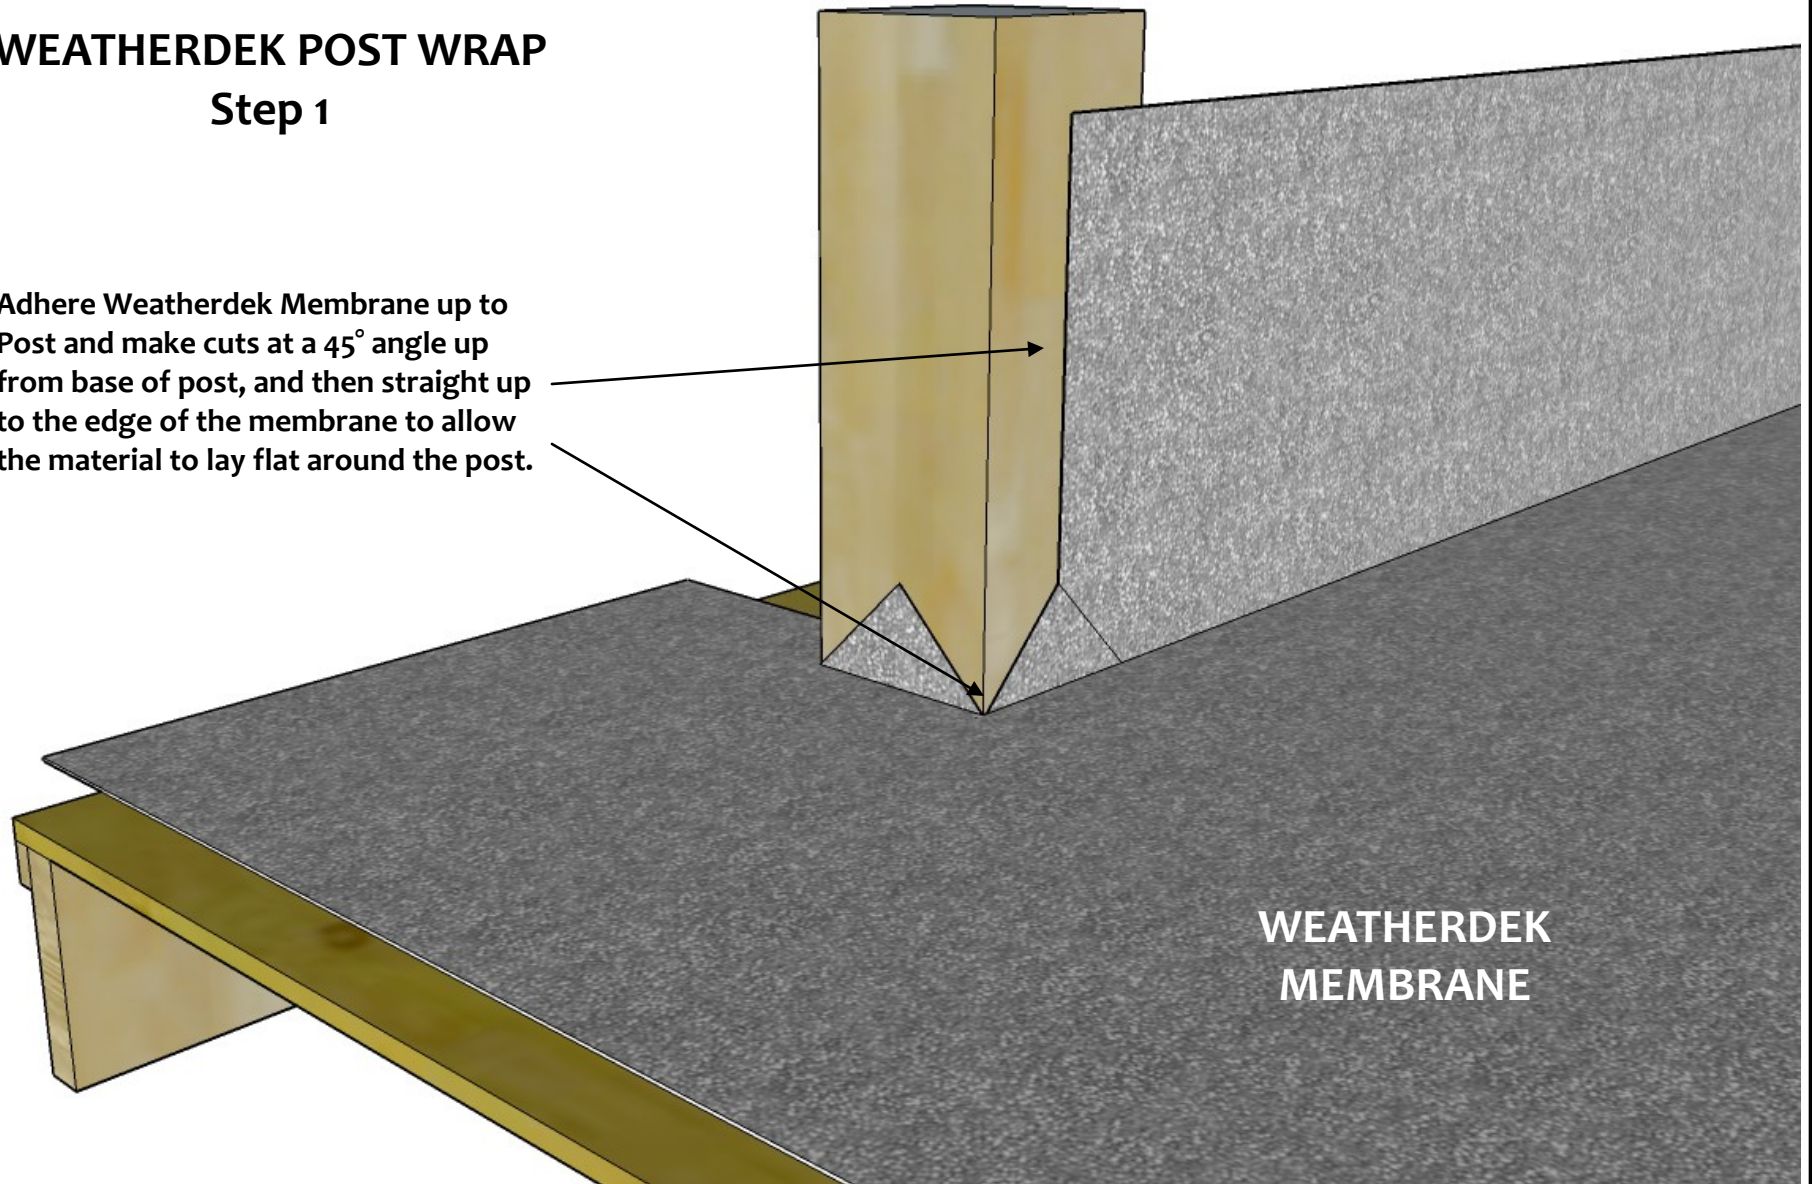

ADS WEATHERDEK CANADA Ltd.

600 Adams Rd. Kelowna, BC
Phone (250) 765-5575
Fax (250) 765-5548
www.weatherdek.com


POST WRAP DETAIL - Step 1

For further information contact your local Weatherdek Dealer.

Date: 12/12/14
Revised:

Drawing: 1/5

WEATHERDEK POST WRAP Step 2

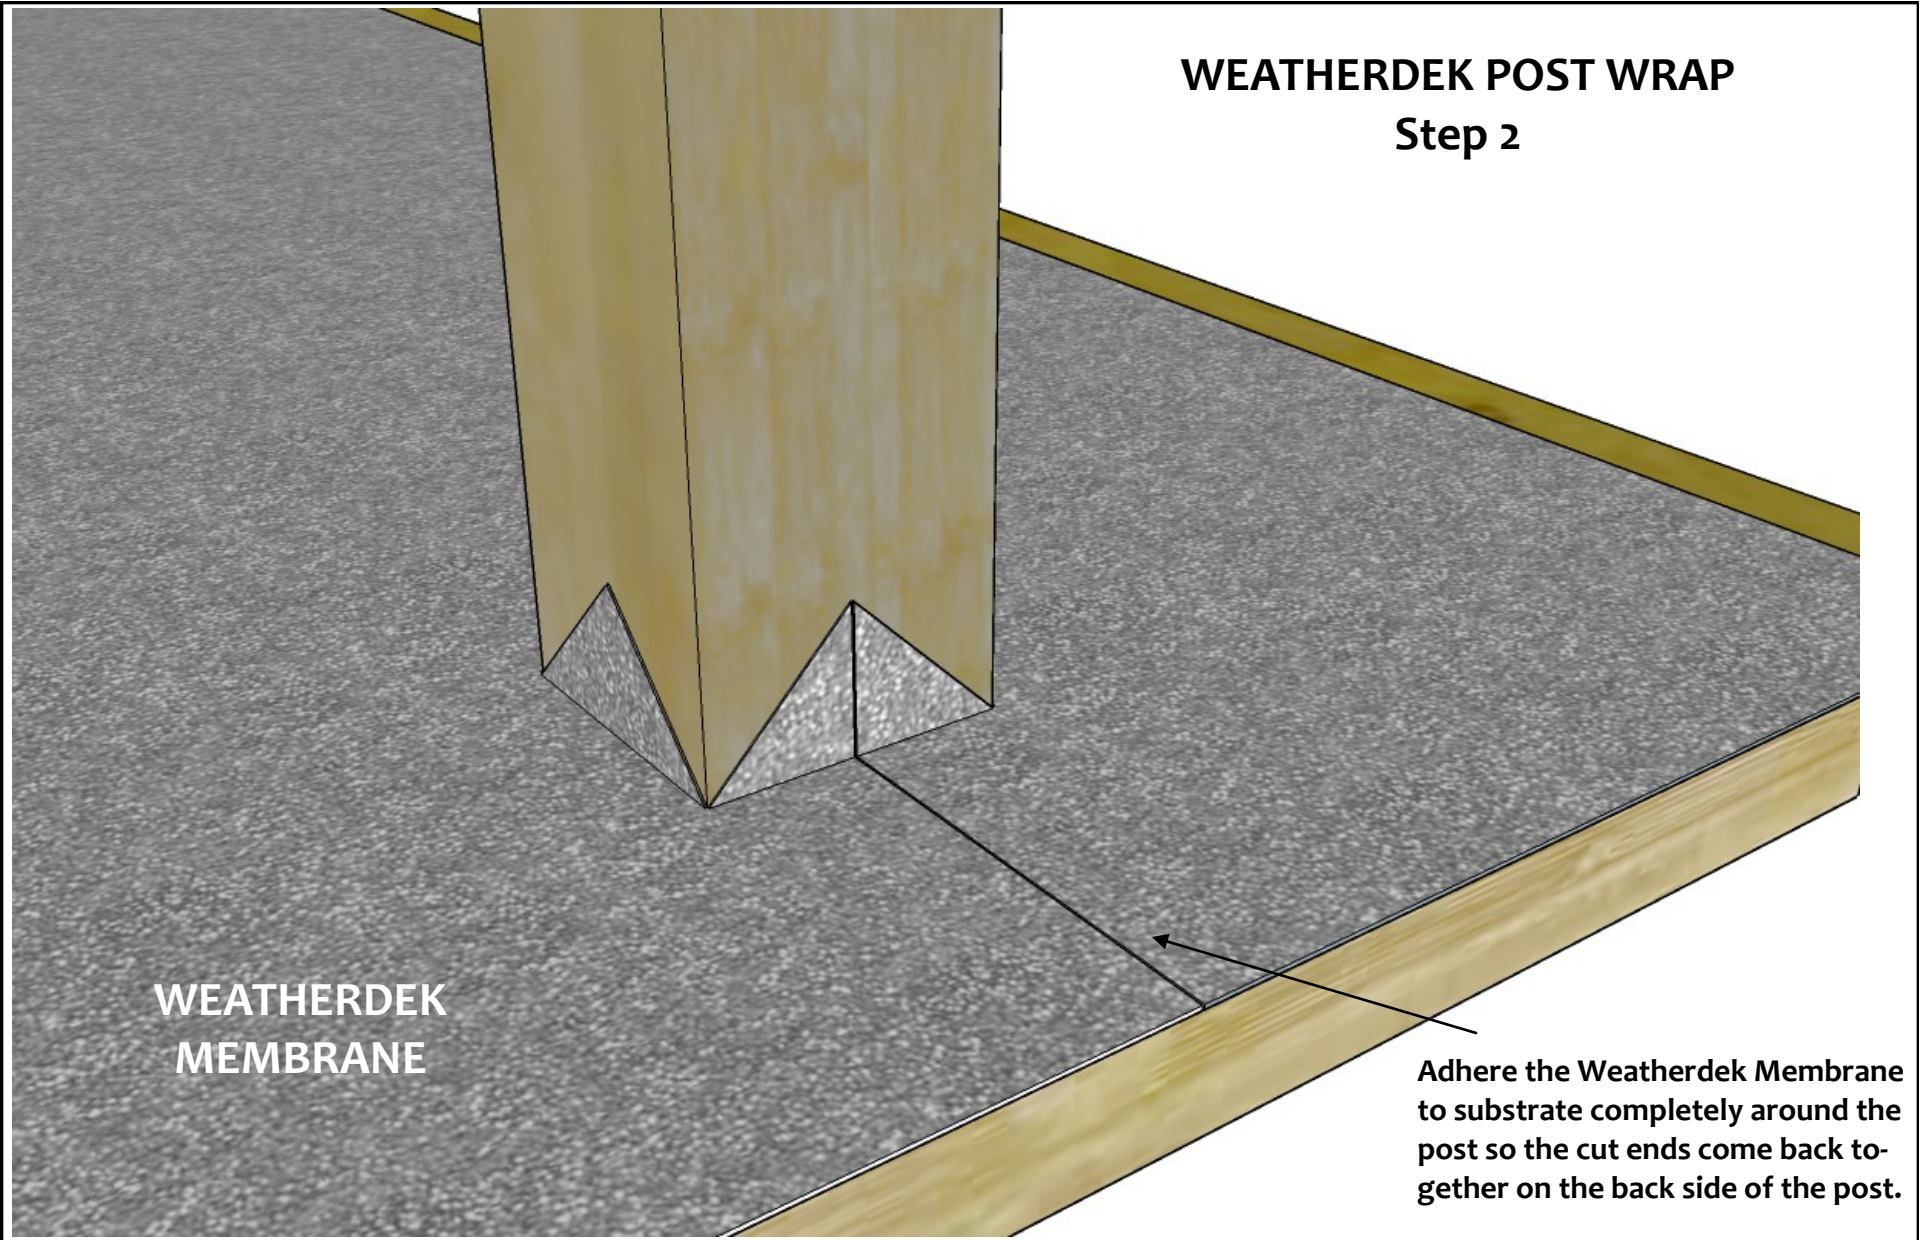

ADS WEATHERDEK CANADA Ltd.
600 Adams Rd. Kelowna, BC
Phone (250) 765-5575
Fax (250) 765-5548
www.weatherdek.com

POST WRAP DETAIL - Step 2


For further information contact your local Weatherdek Dealer.

Date: 12/12/14
Revised:

Drawing: 2/5

WEATHERDEK POST WRAP

Step 3

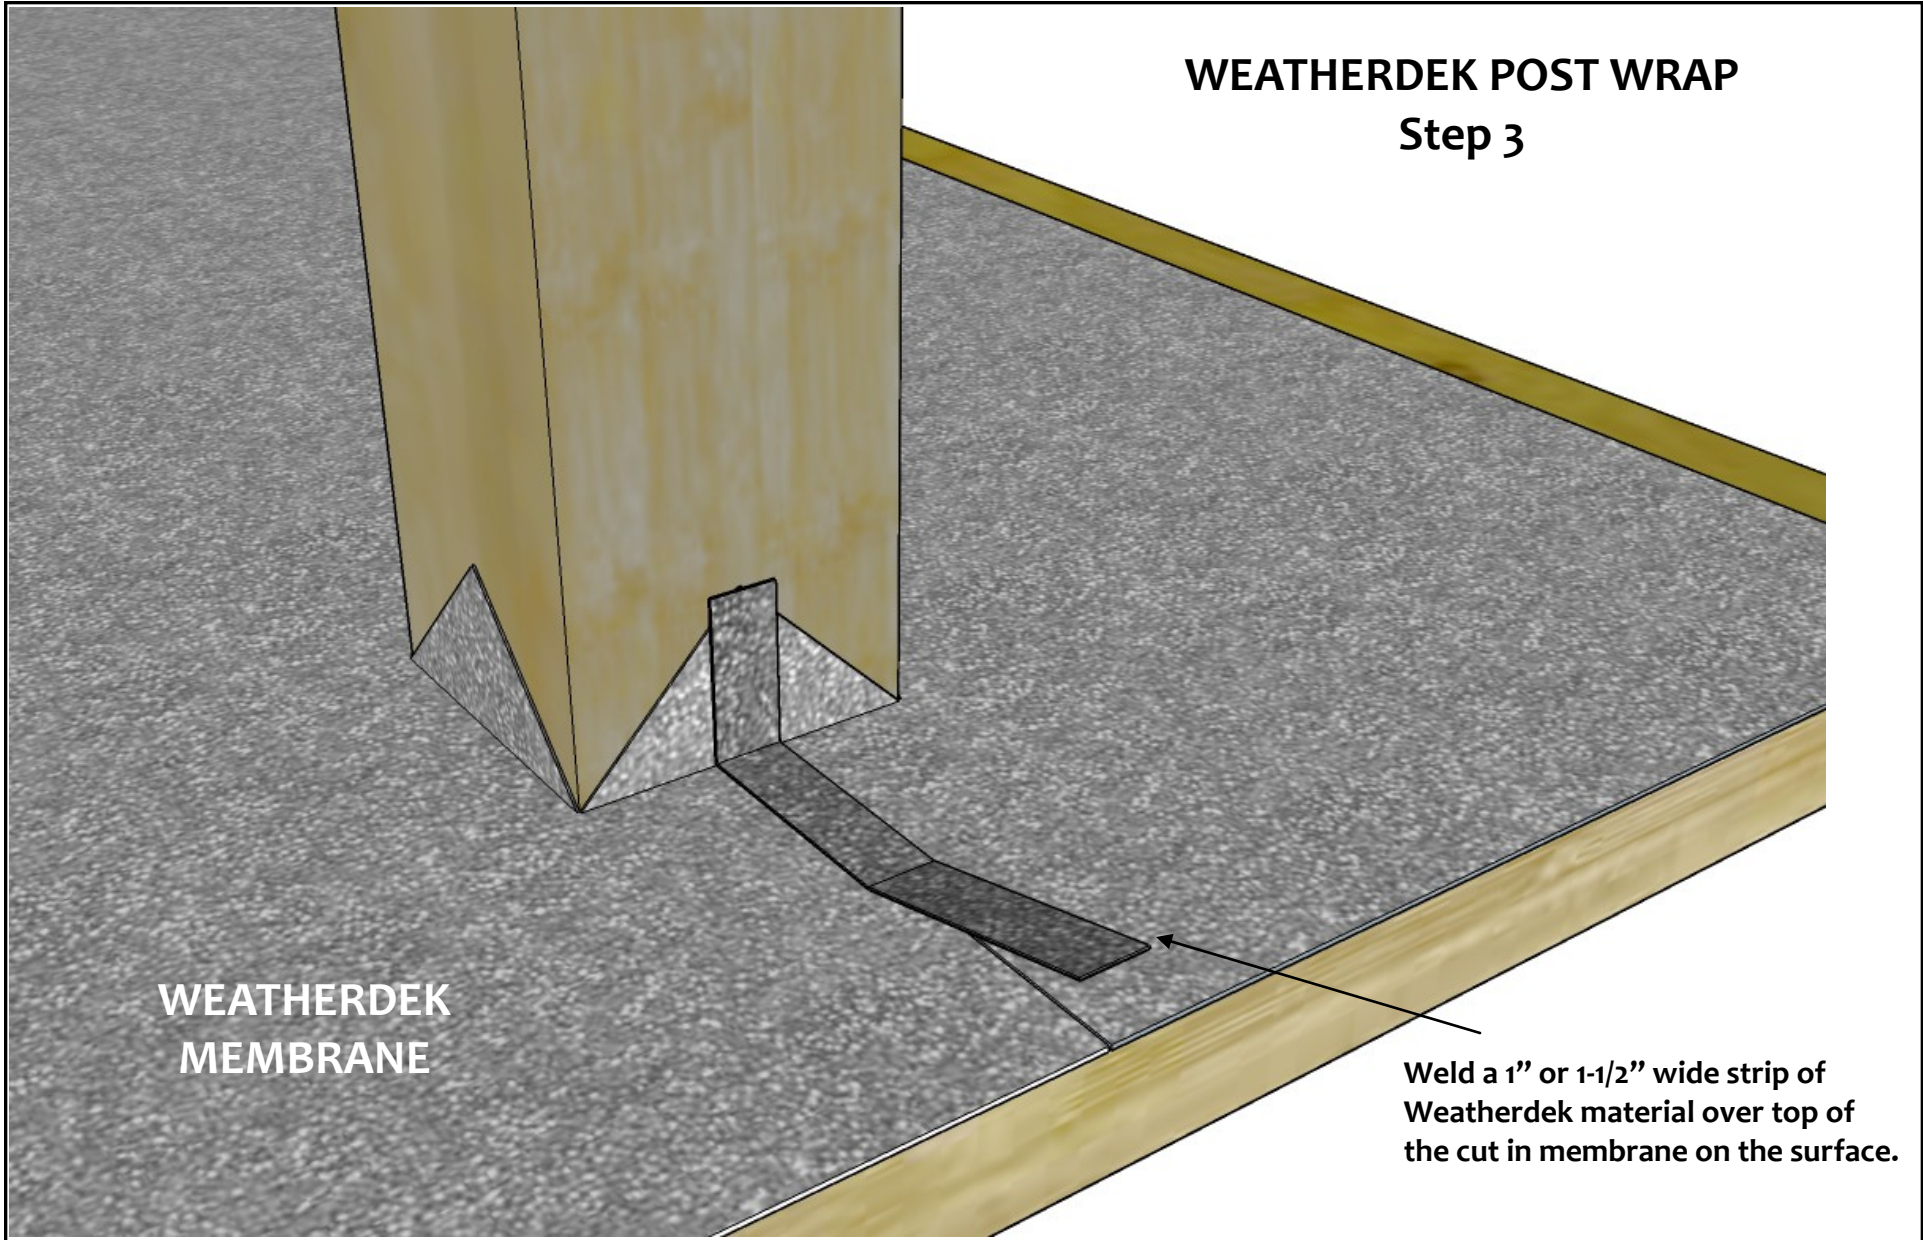

ADS WEATHERDEK CANADA Ltd.
600 Adams Rd. Kelowna, BC
Phone (250) 765-5575
Fax (250) 765-5548
www.weatherdek.com

POST WRAP DETAIL - Step 3


For further information contact your local Weatherdek Dealer.

Date: 12/12/14
Revised:

Drawing: 3/5

WEATHERDEK POST WRAP

Step 4

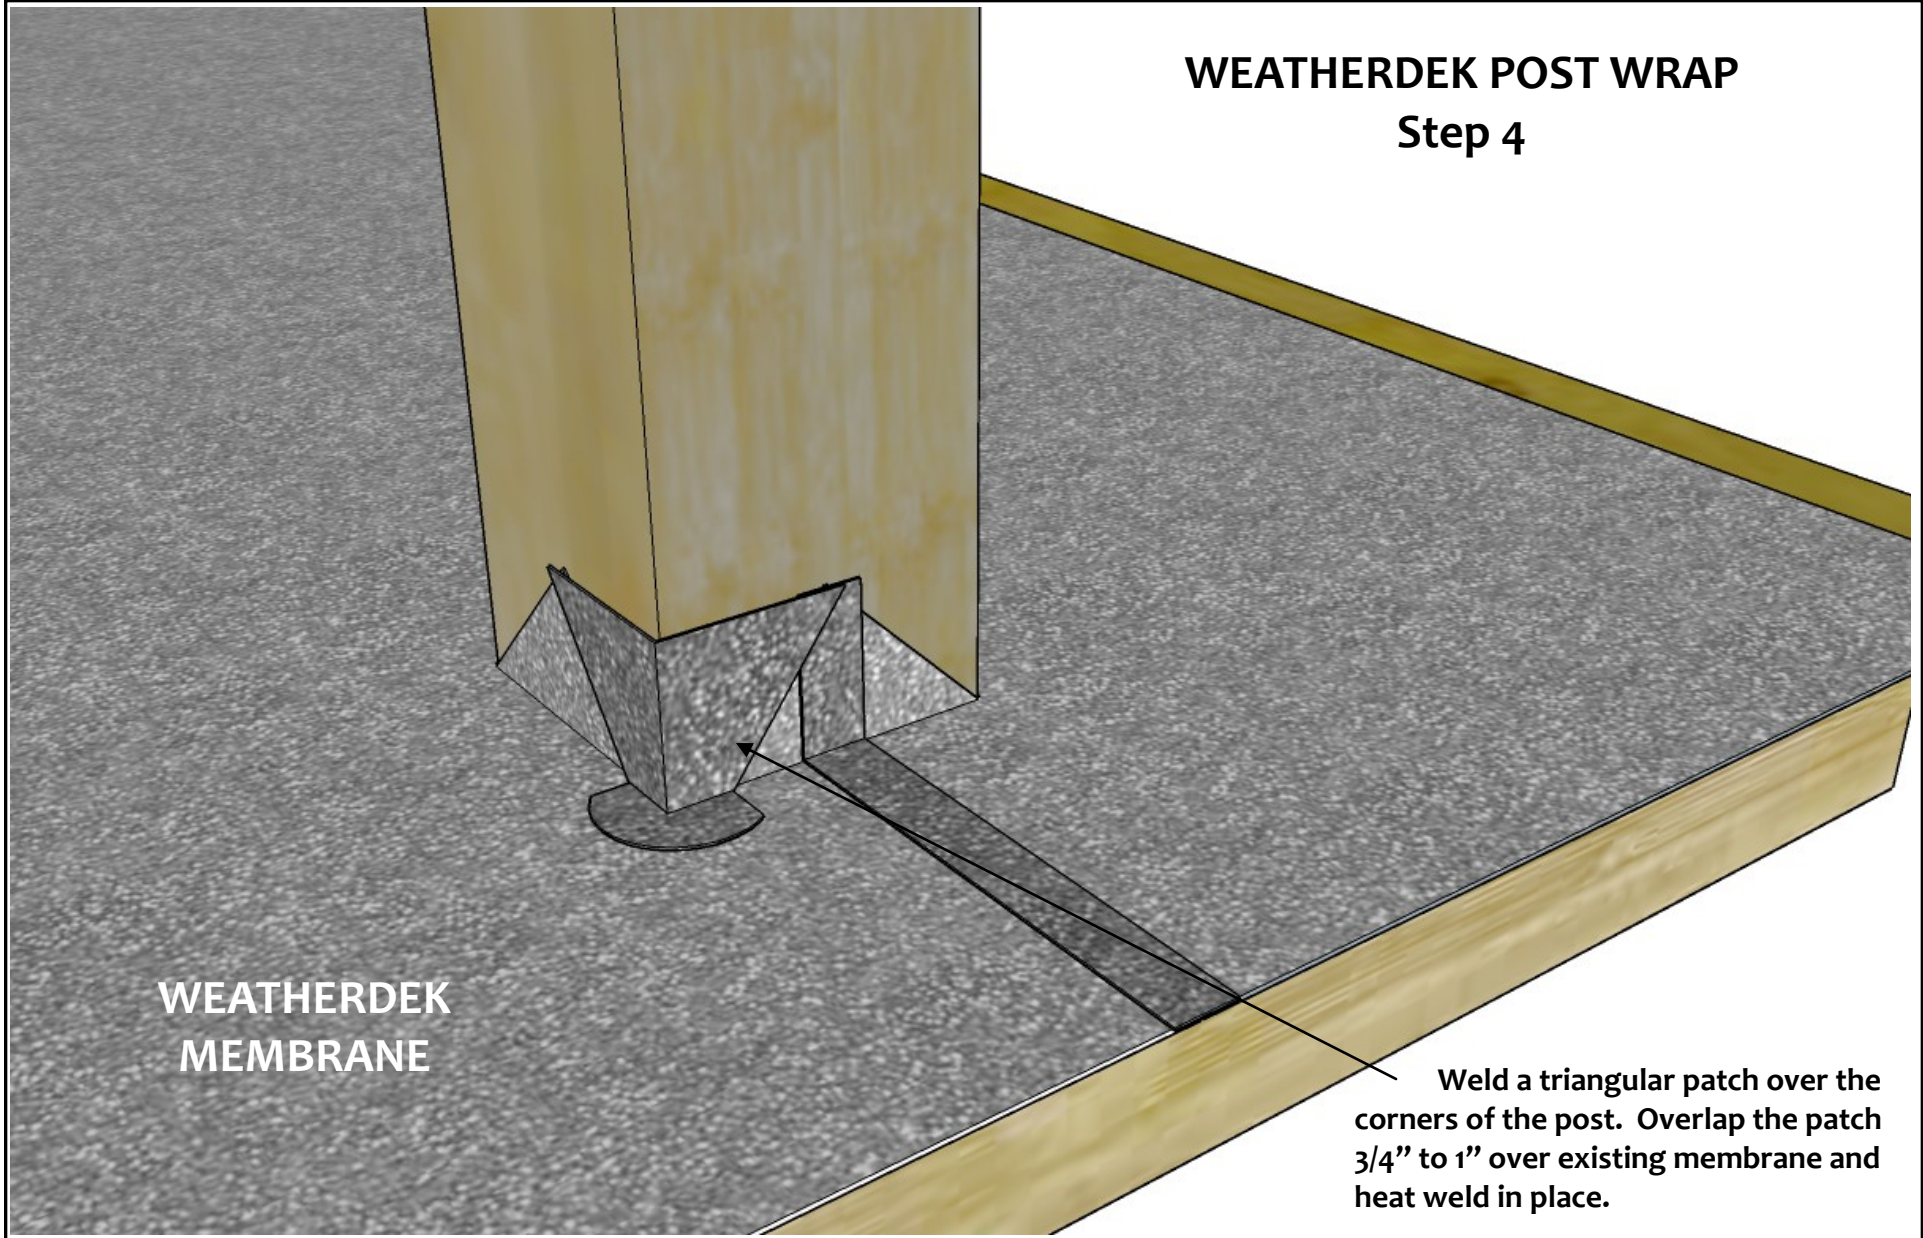

WEATHERDEK
MEMBRANE

Weld a triangular patch over the corners of the post. Overlap the patch 3/4" to 1" over existing membrane and heat weld in place.



ADS WEATHERDEK CANADA Ltd.

600 Adams Rd. Kelowna, BC
Phone (250) 765-5575
Fax (250) 765-5548
www.weatherdek.com

POST WRAP DETAIL - Step 4


For further information contact your local Weatherdek Dealer.

Date: 12/12/14
Revised:

Drawing: 4/5

WEATHERDEK POST WRAP

Step 5

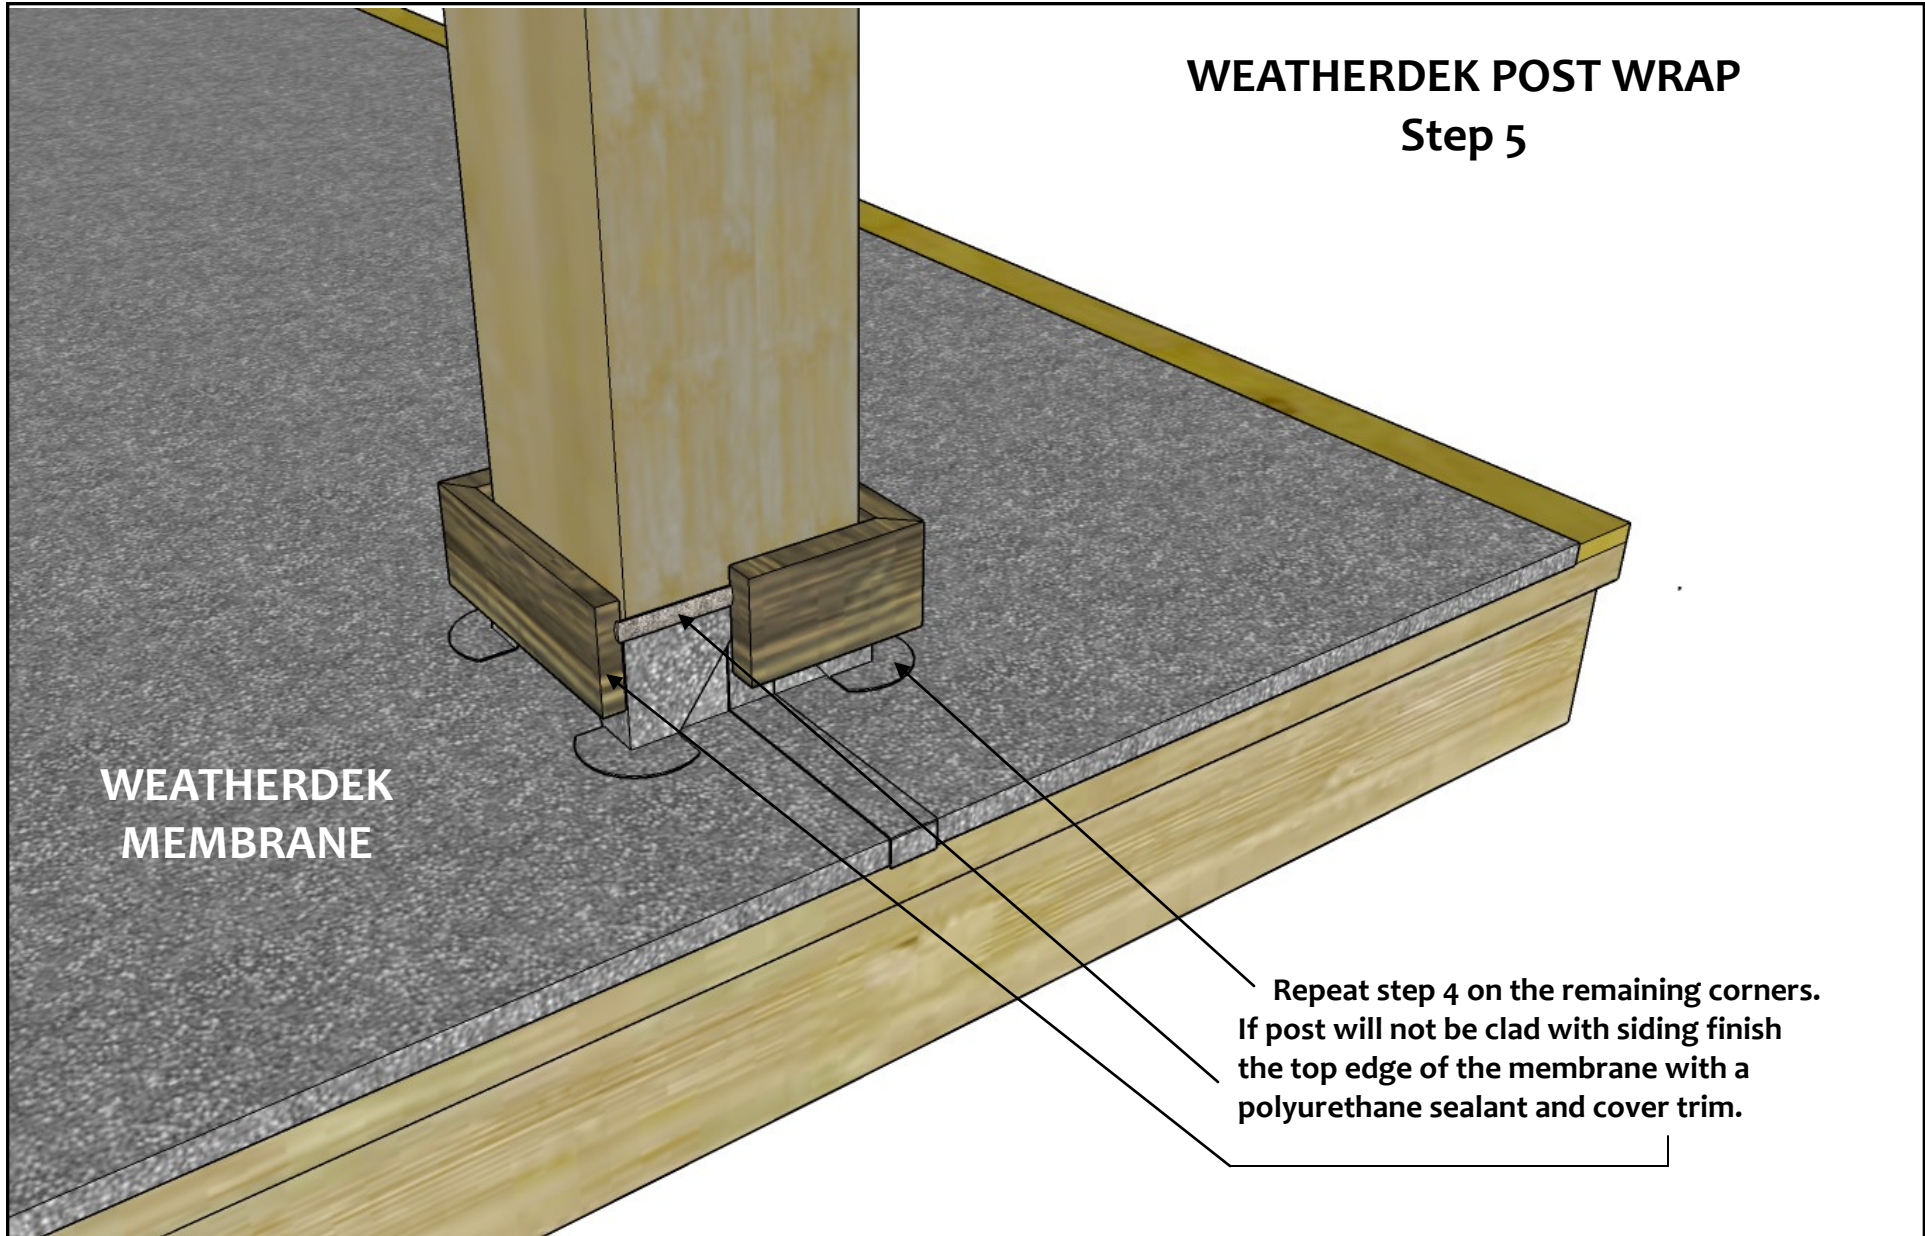

ADS WEATHERDEK CANADA Ltd.
600 Adams Rd. Kelowna, BC
Phone (250) 765-5575
Fax (250) 765-5548
www.weatherdek.com


POST WRAP DETAIL - Step 5

For further information contact your local Weatherdek Dealer.


Date: 12/12/14
Revised:

Drawing: 5/5

WEATHERDEK POST WRAP Post Flush with Corner of Deck

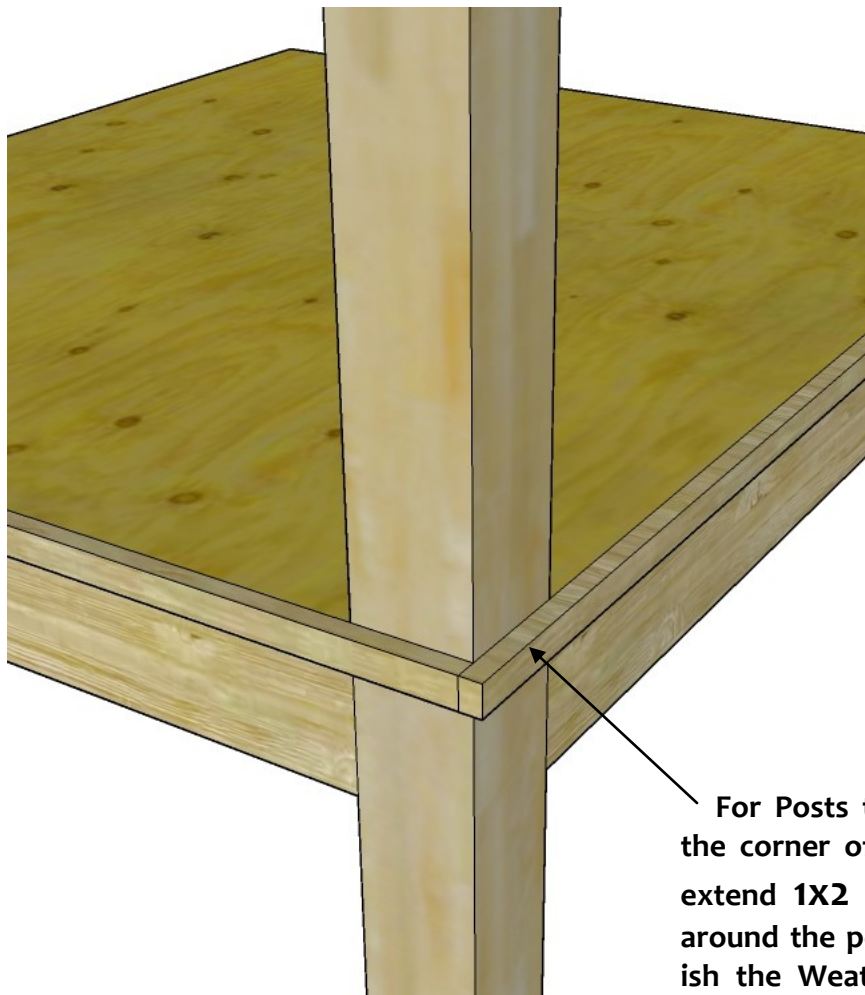

For Posts that are flush with the corner of the deck surface, extend 1X2 or 2X2 trim strip around the post. Wrap and Finish the Weatherdek membrane and over the trim strip.

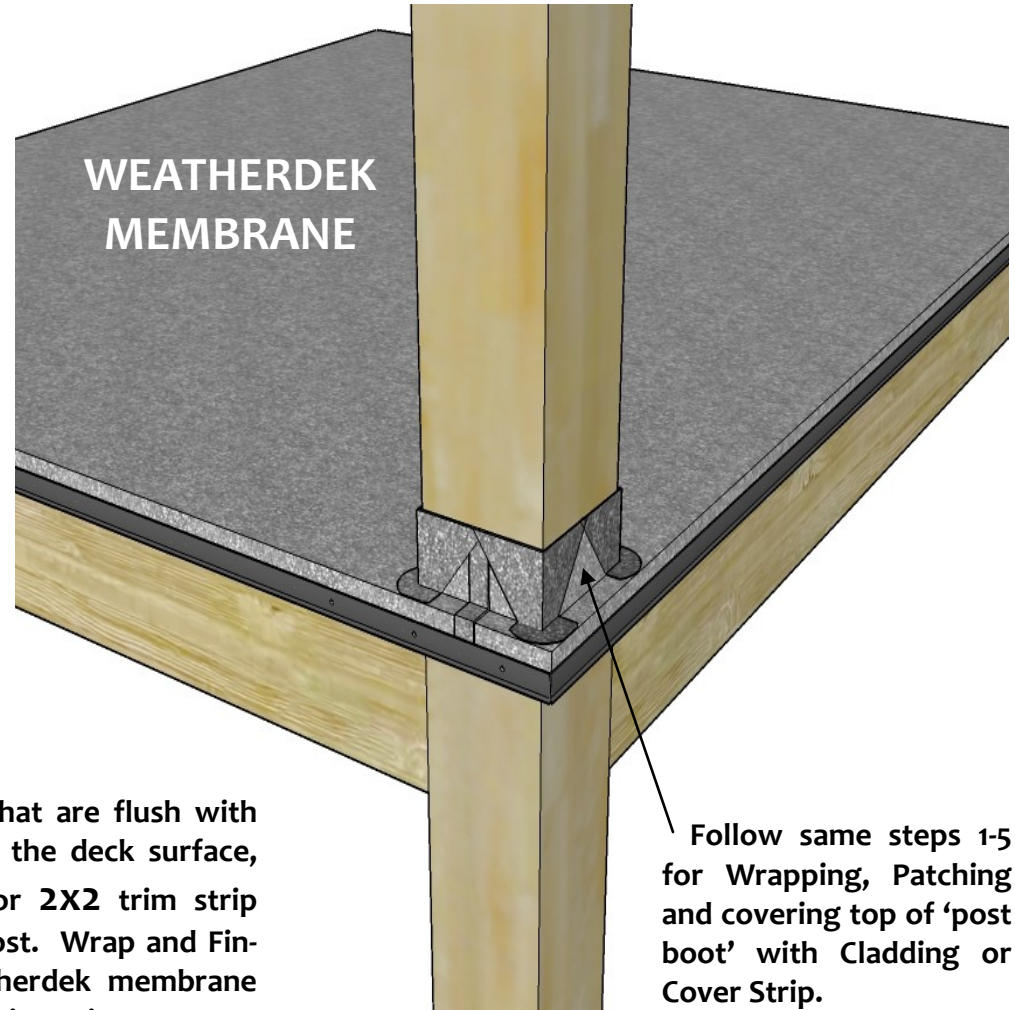

Follow same steps 1-5 for Wrapping, Patching and covering top of 'post boot' with Cladding or Cover Strip.



ADS WEATHERDEK CANADA Ltd.

600 Adams Rd. Kelowna, BC
Phone (250) 765-5575
Fax (250) 765-5548
www.weatherdek.com

POST WRAP DETAIL - Post Flush to Corner of Deck

For further information contact your local Weatherdek Dealer.

Date: 19/09/16
Revised:

Drawing: 6/6