


## #WD-501 DECK PREP



### PLYWOOD DECK CONSTRUCTION DETAILS

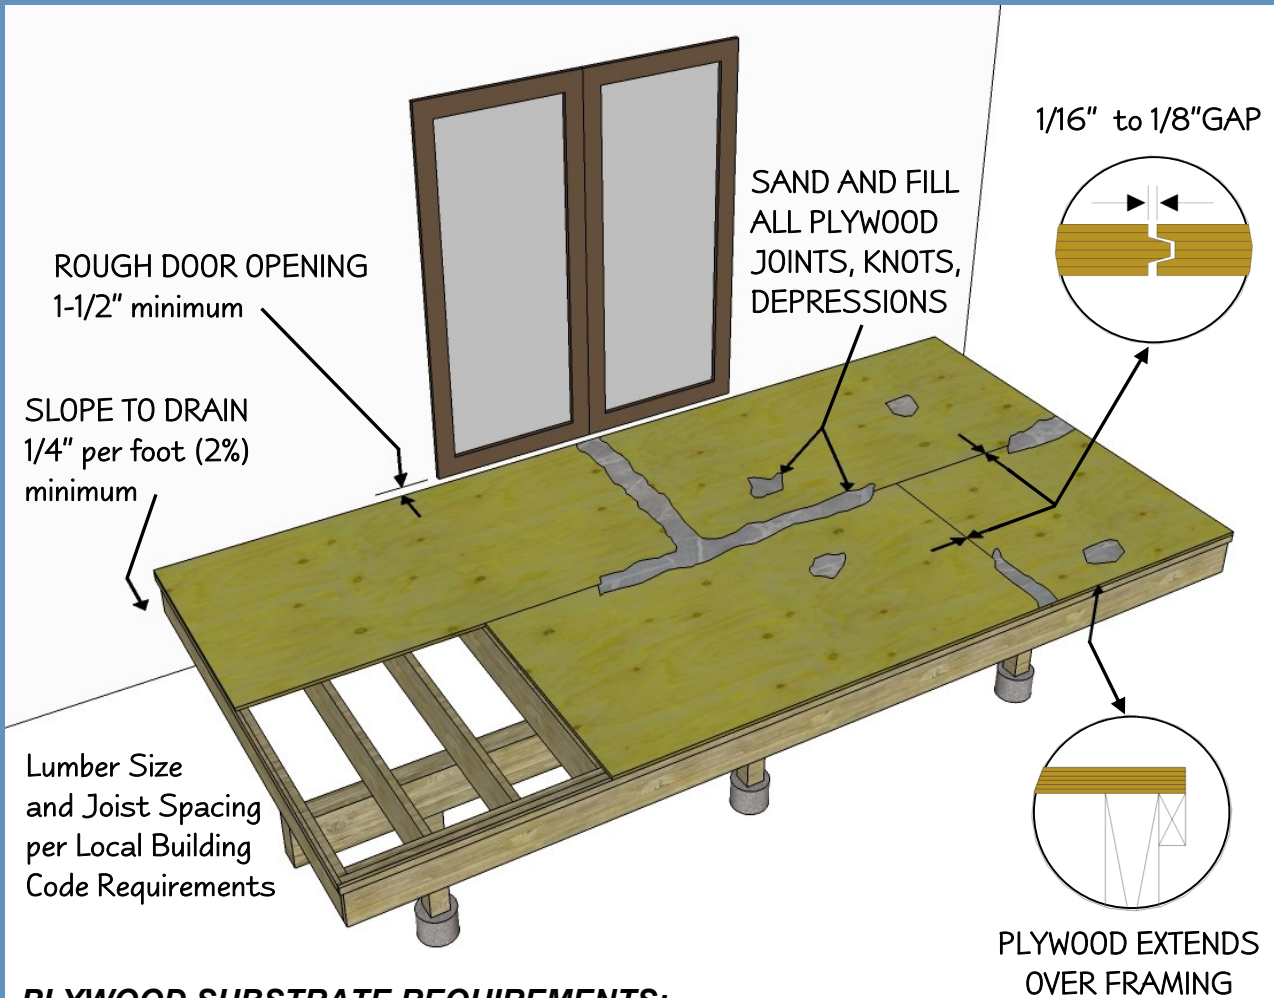

#### **PLYWOOD SUBSTRATE REQUIREMENTS:**

Plywood: 5/8" T&G Exterior Douglas Fir (DFP) or (SPF) - minimum requirement.

3/4" T&G Exterior Douglas Fir (DFP) - recommended.

Recommended moisture content 12-14%.

Stagger plywood sheets.

Synthetic plywood patches should be removed and filled.

All floor filler to be cement based.

Treated plywood must **NOT** be used.

Fasteners: 1-3/4" #8 Coated Deck Screws - 6" o/c @ perimeter, 8" o/c @ field.

Countersink or recess all fastener heads.

Exterior grade urethane adhesive between plywood panels and joists.

Flashing: Recess and fill all deck flashings for level, smooth transitions.

Slope: Maintain positive slope away from all walls after shrinkage and settling.

For further information regarding Weatherdek products please contact:  
Weatherdek Ontario at: [www.weatherdekontario.com](http://www.weatherdekontario.com) or 1-877-922-4522